

## Accessories Zubehör



10 x Necklace-Set



1 x Magnet for reset



1 x Clip-Set



10x Wristband-Set


5 x 3V Battery CR2025



Torx T4 screwdriver

## Battery change Batterie wechseln

Only by authorized personnel!  
Nur durch Fachpersonal!

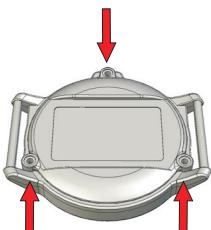

## Cleaning the transmitter and the accessories Reinigung Sender und Zubehör



**Not to be used:** alcohol, alcohol or vinegar-based cleaning agents, vinegar, cleaning agents for glass or plastics, disinfectants (except Incidur®), methylated spirits, benzine, other aggressive agents, body lotion, sun cream, hand and nail cream. Do not wash.

**Nicht benutzen:** Alkohol, Reinigungsmittel mit Alkohol oder Essig, Essig, Reinigungsmittel für Glas oder Kunststoffe, Desinfektionsmittel außer Incidur®, Brennspiritus, Waschbenzin, andere aggressive Mittel, oder Body Lotion, Sonnenmilch, Hand- und Nagelcreme. Nicht waschen.

(D) Bosch Sicherheitssysteme GmbH  
Haus-ServiceRuf  
Ingersheimer Straße 16  
D-70499 Stuttgart  
Deutschland  
Tel: +49 (0)711 3653 1000  
Fax: +49 (0)711 811 5125 294

(F) Bosch Security Systems France  
Atlantic 361  
361, avenue du Général de Gaulle  
F-92147 Clamart  
France  
Tel: + 33 (0)825 12 8000 (0,15 € TTC/Min)  
Fax: + 33 (0)820 900 960 (0,12 € TTC/Min)

(GB) Bosch Security Systems Ltd  
Broadwater Park  
North Orbital Road  
Denham  
UB9 5HN  
United Kingdom  
Phone: +44 (0)1895-878088  
Fax: +44 (0)1895-878089



(CH) TeleAlarm SA Bosch Group  
Rue du Pont 23  
CH-2300 La Chaux-de-Fonds  
Switzerland  
Phone: +41 (0)32 327 25 40  
Fax: +41 (0)32 327 25 41


(B) Bosch Security Systems nv/sa  
Torkonijestraat 21F  
B-8510 Marke  
België / Belgique  
Tel: +32 (0)56 02 20 40  
Fax: +32 (0)56 20 26 75

(NL) Bosch Security Systems BV  
Postbus 80002  
NL-5600 JB Eindhoven  
Nederland  
Tel: +31 40 25 77 200  
Fax: +31 40 25 77 202

(SE) Bosch Security Systems AB  
Vestagatan 2  
SE-416 64 Göteborg  
Sverige  
Telefon: +46 (0)31 722 5300  
Fax: +46 (0)31 722 5340

# S37L Wristband Transmitters - Locators

## Operating instructions Bedienungsanleitung

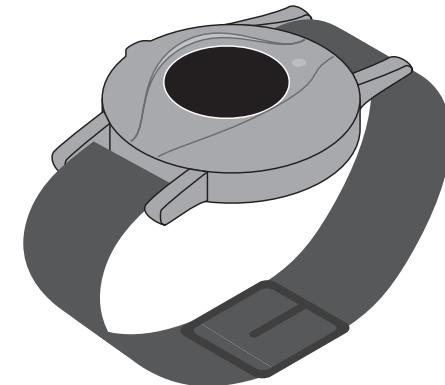

CRS-SB-424FI  
CRS-SB-425FI  
CRS-SB-426FI  
CRS-SB-428FI  
CRS-SB-430FI

Wristband transmitter S37L-Locator  
Wristband transmitter S37L-Loc. without dementia alarm  
Wristband transmitter S37L-Loc. only dementia alarm  
Wristband transmitter S37L-Loc. without manual trigger  
Wristband transmitter S37L-Loc. extended Dementia




970.095 V1 2009.07

**BOSCH**


## Trigger an emergency call

Notruf auslösen

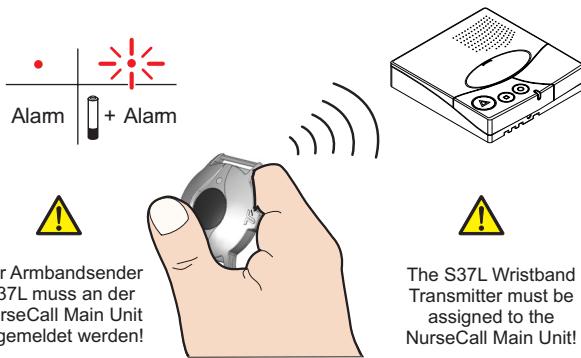

## Detection at a beacon controller

Erkennung am Induktionsender

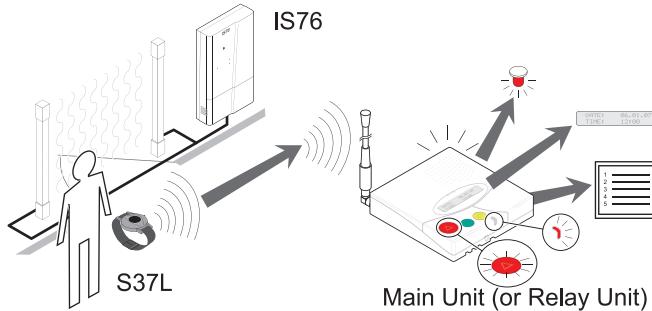

## Safety notes

Sicherheitshinweise



Repairs only by authorized service stations


Reparaturen nur durch autorisierte Servicestellen

Shortening the cord

Kordel kürzen



Changing the wearing method  
Tragenarten wechseln

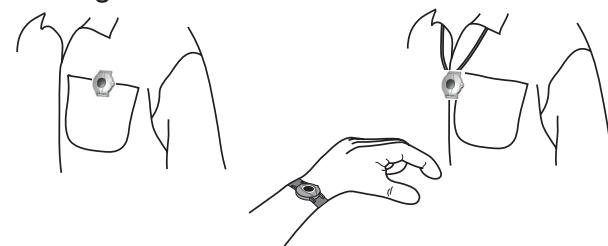

## Technical data

Technische Daten

	Ø 42 mm x 13.5 mm 22 g
	1x CR2025 3V
	0°C ~ +55°C
	Frequency: 434.01 MHz
	Minimum range in free field: 200 m
	Automatic radio link monitoring: daily check and at every alarm
	IP 67 Environment class II

